



ITEM NUMBER	PART NUMBER	QUANTITY
1	Bearing Lock Nut	1
2	Bearing Lock Washer	1
3	Bearing Cap-Outer	1
4	Set Screw	1
5	Bearing Cap-Inner	1
6	Hex Head Cap Screw	---
7	Bearing Carrier	1
8	Serial Number Plate	1
10	Housing Gasket	2
11	Key	1
13	Ball Bearing	1
16	Bracket Assembly	1
17	Pipe Plug	2
20	Cover	1
21	Idler Pin	1
22	Housing with No Flanges	1
23	Idler Assembly	1
24	Rotor Assembly	1
30	Foot	1
40	Port	2

ITEM NUMBER	PART NUMBER	QUANTITY
41	Port Gasket	2
42	Socket Head Cap Screw	---
60	Packing Set	1
61	Gland	1
64	NPT Pipe Plug	---
65	NPT Pipe Plug	---
66	Flat Washer	---
67	Stud	2
68	Hex Nut	2
71	Bonnet Gasket	1
72	Jam Nut	1
73	Relief Valve Cap	1
74	Adjusting Screw	1
75	Relief Valve Cap Gasket	1
76	Bonnet	1
77	Spring Guide	1
78	Spring	1
79	Relief Valve Body	1
80	Poppet	1
81	Hex Head Cap Screw	---

When ordering parts please provide the pump serial number and part description to customer service (Part Number and Serial Number Plate).

Some hardware quantities not shown as they vary with pump model (Quantity).

Cover and idler pin are only sold as an assembly (Cover, Idler Pin).

Replacement bushings are available as spare parts (Bracket Assembly, Idler Assembly).

For mechanical or cartridge seal pumps these parts will change (Packing Set, Gland, NPT Pipe Plug).